


INSTALLING A 21-TUNER SWM-ENABLED LNB

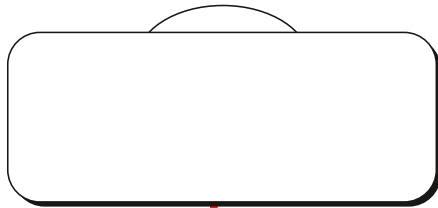


Use Solid Copper Core Wiring for lines from LNB and power inserter

Use the smallest splitter possible.

Terminate all unused connections.

Your installation may vary.

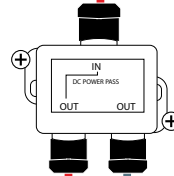


(3) Genie Clients



H44 or HR54 Genie connected to red port on splitter

Other DVRs require the use of PI21 or PI29 Power inserter

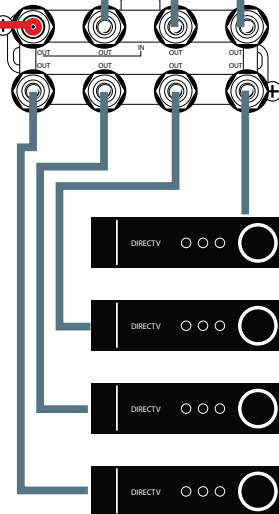

(2) H25 Receivers

