

Solid Signal shows you...


HOW TO DO IT



*Use one remote to
control four receivers*




Step 1: Use the menus

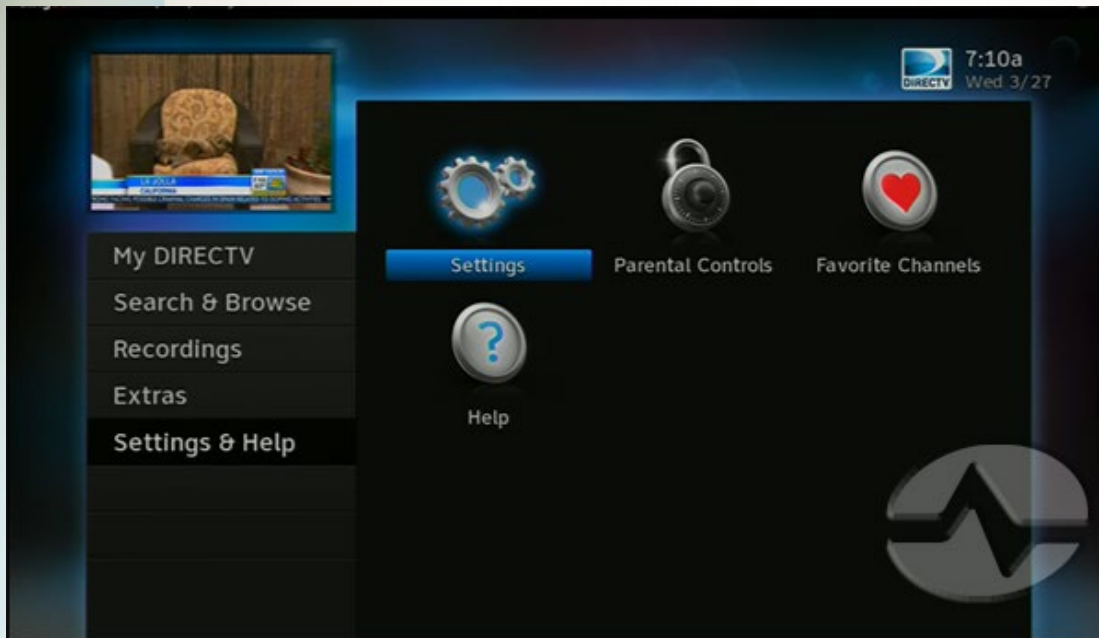


Start by pressing the {MENU} button and using the down arrow to go to “Settings & Help.” Press {SELECT}. Confirm that “Settings” is highlighted and press {SELECT}. Use the down arrow to go to “Remote Control” and press {SELECT}.

You should see a menu like this one. If you do not see the “Advanced Setups” menu, confirm your receiver model (should be H21-H25 or HR20-HR24) and make sure the remote is set to IR mode. (Need help resetting your remote to IR mode? [Here’s a quick guide.](#))

Arrow down to “Advanced Setups” and press {SELECT}.

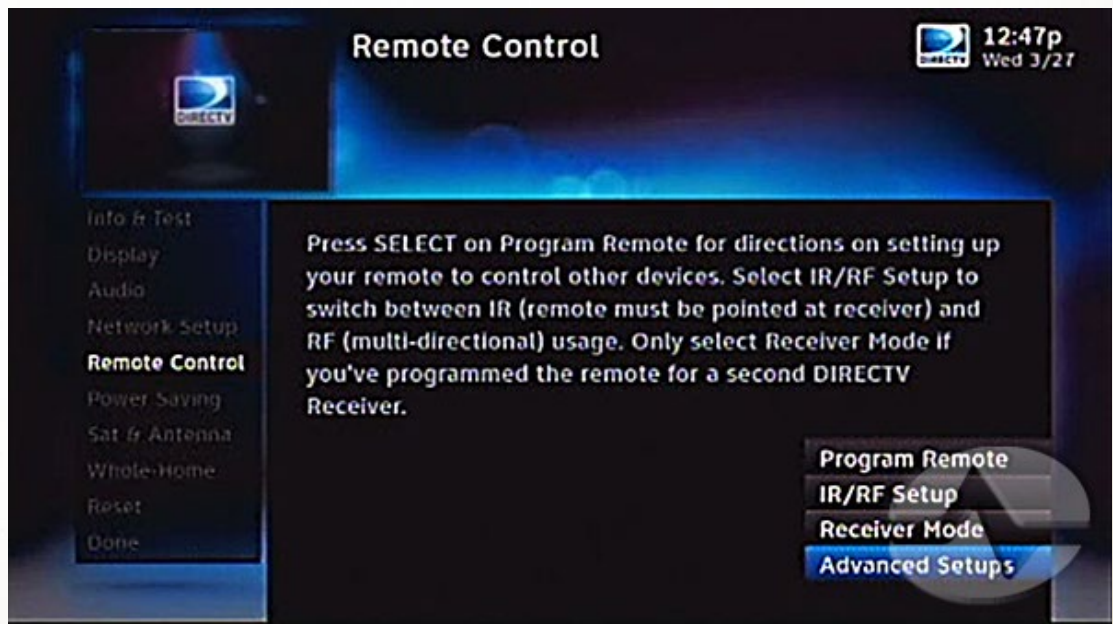

Step 1, continued

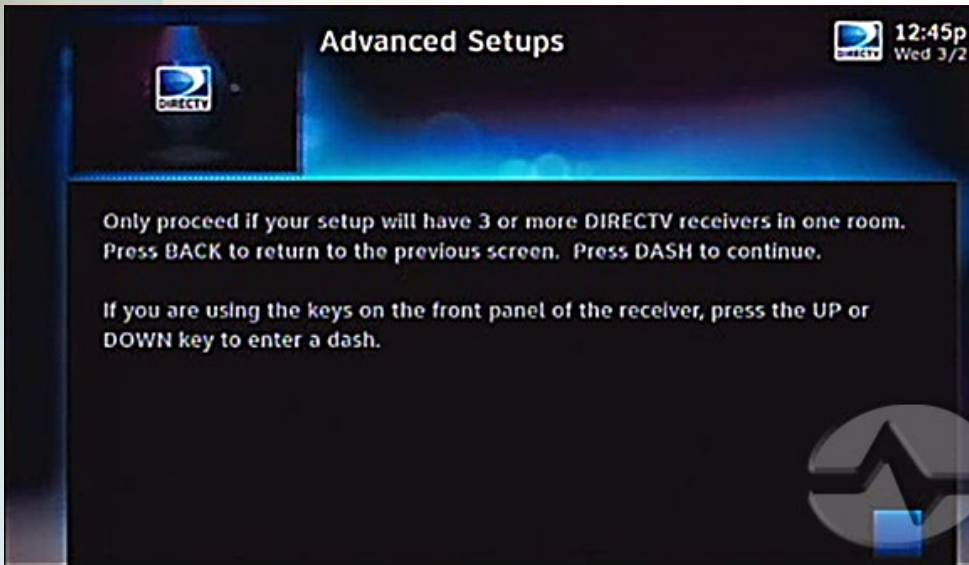


You will get a “nag” screen like this one to make sure you know what you’re doing. If you don’t do this process correctly, you may lose the use of the remote control and at that point you’ll need the front panel buttons to help you. Press the {-} (Dash) button on the remote to continue.

Here you have the option to change the receiver number. You can choose from 1 to 8. With the receiver number highlighted, press the {SELECT} button and use the arrows to select the one you want and press {SELECT} again.

You should leave one receiver set up as Receiver 1, and if you have a second, use Receiver 2. For a third, use Receiver 3, and so forth.

When you are done use the right arrow button to highlight “Continue” and press {SELECT}.

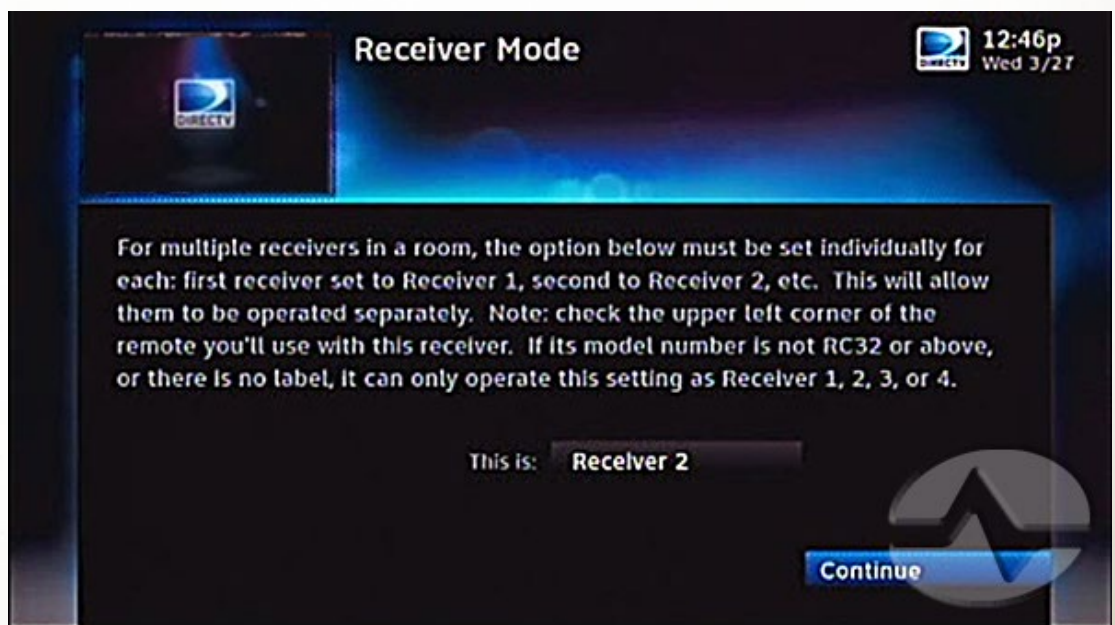

Step 2: Program the remote



Now that you have set the receiver mode, you have to set the remote to put out codes that the receiver can use. You can leave Receiver 1 set up on the {D} position of that top switch, but the AV1, AV2 and TV positions can be programmed to control different receivers. Note that by doing this you may need to use a different remote to actually control the TV, because the TV position will be controlling your DIRECTV box. You'll see a screen like this one above.

- *Start by sliding the switch to the position you want to change. If you want to control Receiver 2, slide the switch to AV1. For Receiver 3, slide the switch to AV2 and for receiver 4 slide the switch to TV.*
- *Press and hold {MUTE} and {SELECT} for at least two seconds. The light above the switch should blink twice.*
- *Enter the code shown on the screen. For Receiver 2 this will be 00002. For Receiver 3 it will be 00003, and for Receiver 4 it will be 00004.*
- *After you enter the last button the remote should blink twice again.*
- *You should now be able to press {SELECT} and that screen should go away.*

If it didn't work, try it again and if you need to get everything the way it was, use the front panel buttons to go back to the previous step and set the receiver mode back to Receiver 1.

Even more advanced...

You can actually control a total of 8 different receivers in the same rack by using two remotes. Set the fourth through eighth receivers to be Receiver 4 through Receiver 8 on the menu, then use codes 00005, 00006, 00007, and 00008 to set the second remote up.

If you have nine receivers you can use an RF remote and set that ninth receiver up to use RF.

Once you have all of this completed, you can throw away the aluminum foil you might have been using to cover the receivers. Just don't forget, if you're using multiple remotes, label them so you know which one you're using!

Setting up one remote to control four receivers is easy, and now... you know how to do it!



SolidSignal.com is your source for DIRECTV equipment, supplies, and support. We have over 10 years' experience in installing and supporting satellite equipment. Our technical staff is ready to answer all your questions!

visit **SOLIDSIGNAL.COM** for the best selection of equipment and supplies for the high-end installer or do-it-yourselfer!

FORUMS.SOLIDSIGNAL.COM is your source for 24-hour support!



BLOG.SOLIDSIGNAL.COM is your information destination for news, reviews, and tips!

