


# INSTALLING A DECA

The following receivers need a DECA: HR20, HR21, HR22, HR23, H21, H23, THR22 (TiVo), R22

Some cables are shown longer than actual size. Use the coaxial and ethernet cables supplied for connection.

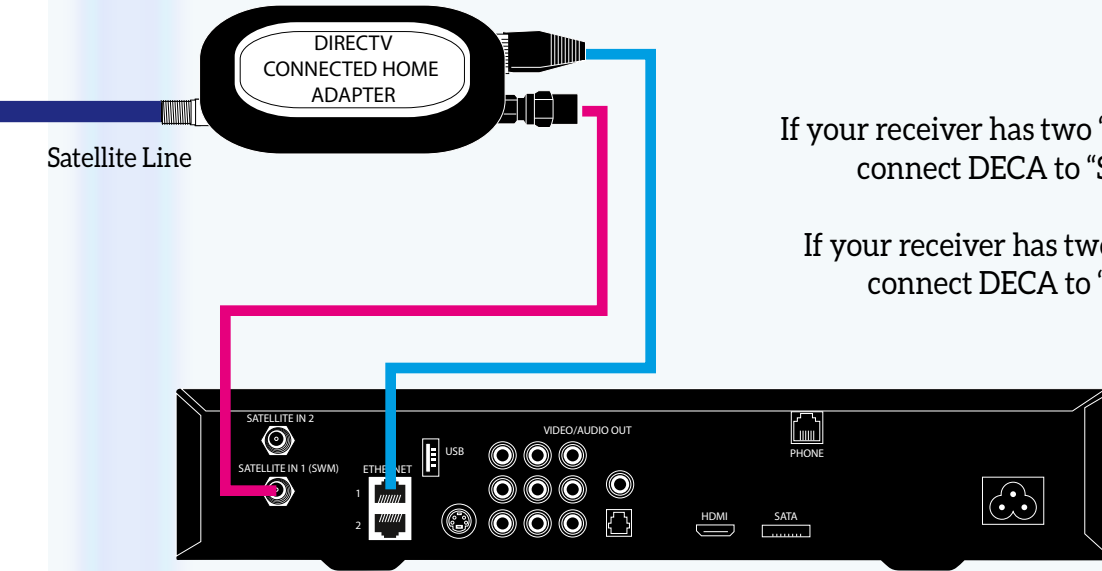


If your receiver has two "Satellite in" ports, connect DECA to "Satellite In 1"

If your receiver has two Ethernet ports, connect DECA to "Ethernet 1"

The layout of your receiver may vary slightly depending on model.

## HR20-100 ONLY:

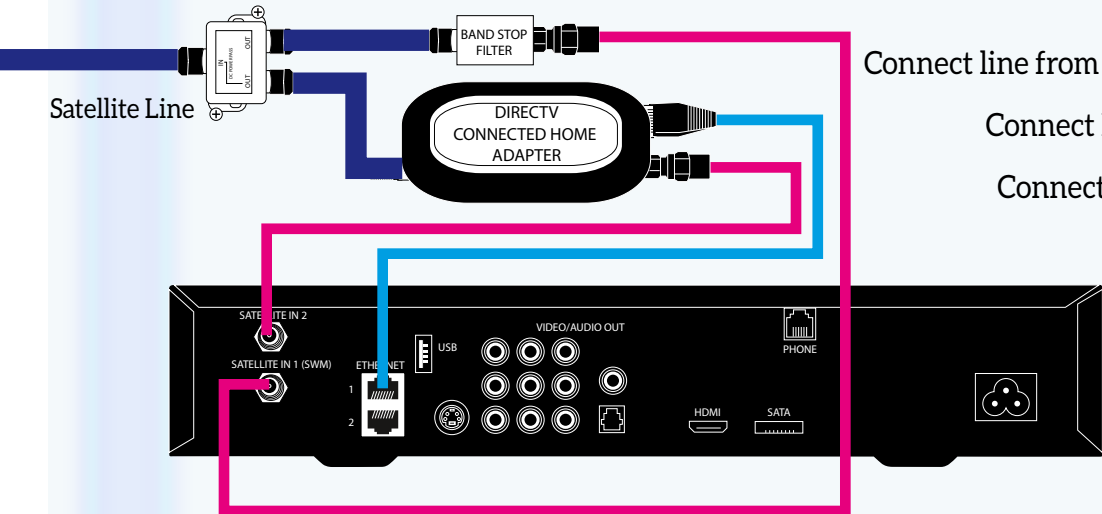

Connect line from Band Stop Filter to Satellite In 1"

Connect DECA to "Satellite In 2"

Connect DECA to "Ethernet 1"

Use a green-label splitter and band stop filter as shown to connect the DECA to the HR20-100.



Project: Coax Networking  
DOCUMENT DATE: January, 2014